How to install NC-2100p

1 Turn off the printer power switch.

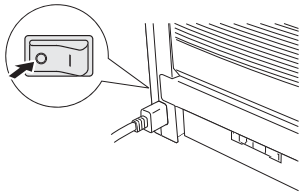

2 Connect the NC-2100p to the parallel port located on the back of the printer.

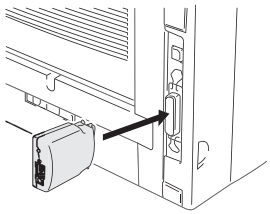

3 Connect the Power cord from AC adapter to the NC-2100p.

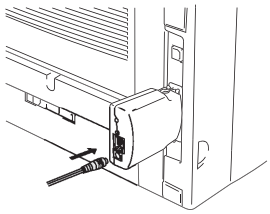

4 Connect the network interface cable to NC-2100p, and then connect it to a free port on your hub.

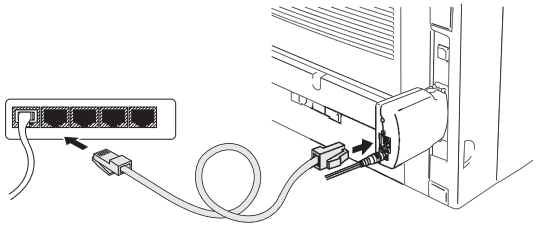

5 Plug the AC Adapter into an AC outlet, and then turn the printer power switch on.